

INSTRUCTIONS FOR INSTALLATION AND MAINTENANCE

Bobrick Models 8221 and 82216 Lavatory-Mounted Soap Dispensers

HOW TO MOUNT DISPENSER (see FIGURE A)

1. Make sure countertop surface around mounting hole is clean and free of soap residue. Insert shank through 1" (25mm) diameter hole. Make sure the rubber washer is in place between the counter top and shank.
2. Insert pump assembly into shank. Turn shank to lock.
3. Place spring washer and retaining nut onto shank under countertop. Thread retaining nut against underside of countertop.
4. Screw on container cap and soap container.

HOW TO FILL DISPENSER

1. Turn escutcheon counterclockwise slightly until it stops.
2. Insert the longest projection at one end of the BobKey into the round hole of escutcheon (see FIGURE B). Push straight in. While holding BobKey in, turn escutcheon counterclockwise about 1/8 turn.

CAUTION: Do not use BobKey to turn escutcheon.

3. Lift out the entire soap pump assembly.
4. Fill dispenser with liquid or lotion soaps.
5. Replace soap pump assembly, reversing the steps above.
6. Secure the escutcheon by turning clockwise until lock snaps into position.

NOTES:

1. Never use abrasive cleaners.
2. Dispenser may also be filled by removing soap container from beneath countertop.
3. For proper maintenance, the soap pump assembly should be flushed every six months by pumping warm water through it.

CAUTION: Do not over tighten retaining nut.

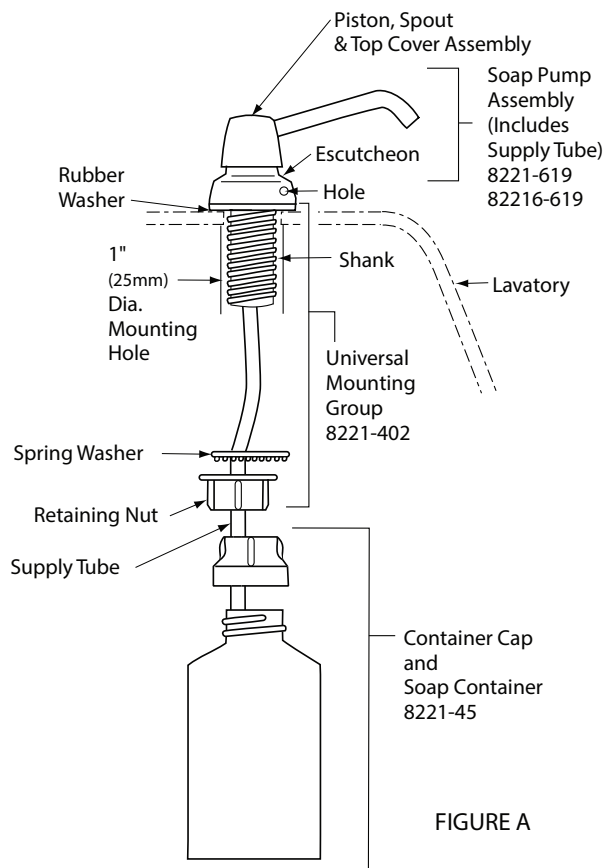


FIGURE A

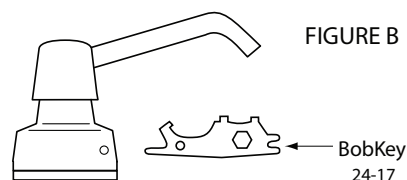


FIGURE B

Designer's Note:

Do not use iodine-based surgical soaps, or alcohol-based antiseptic solutions in this unit; soap valve is not designed to dispense these types of corrosive soaps.

REPLACEMENT PARTS LIST

8221-619	Soap Pump Assembly – 4-inch Spout
82216-619	Soap Pump Assembly – 6-inch Spout
8221-402	Universal Mounting Group
8221-45	Soap Container & Cap
24-17	BobKey
822-94	Container Cap
8221-95	Soap Container



BUILDING VALUE SINCE 1906