


# MAINTENANCE MANUAL


INSTANDHALTUNGSANLEITUNG  
MANUEL D'ENTRETIEN  
ISTRUZIONI PER LA MANUTENZIONE

**KNOW  
HOW**  
INSTALLED


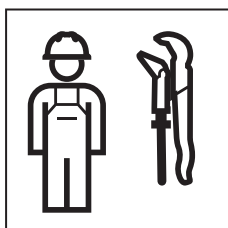





1

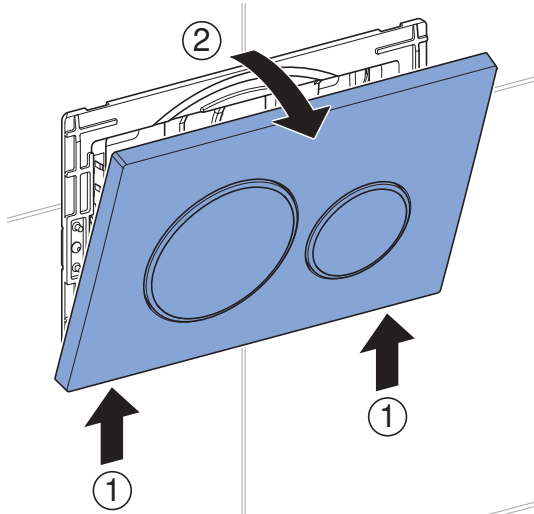


2

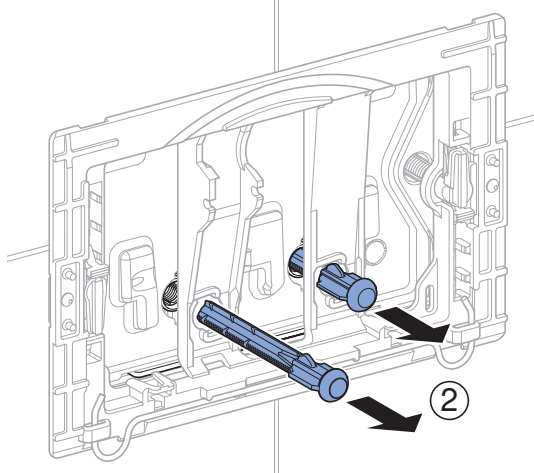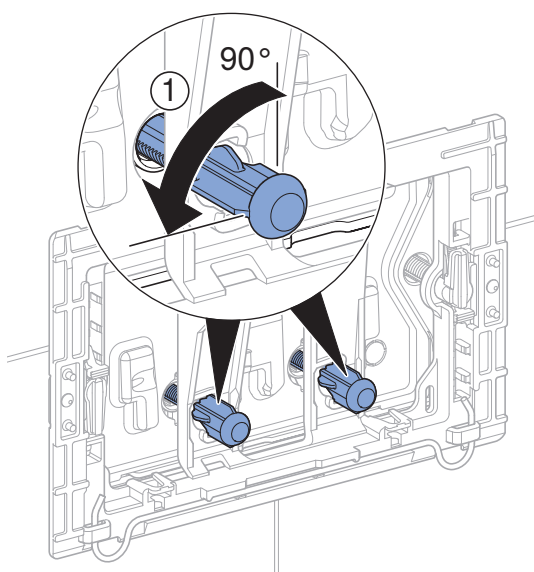


3

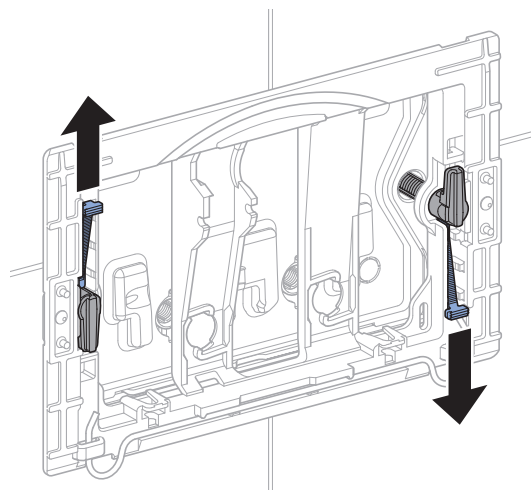


4

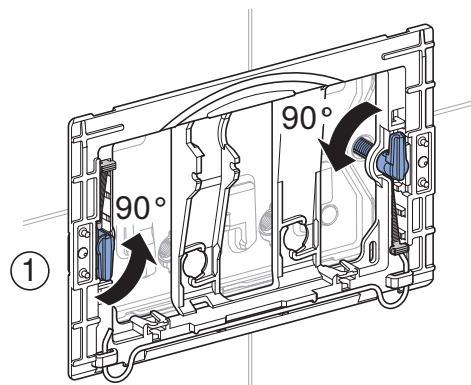


5

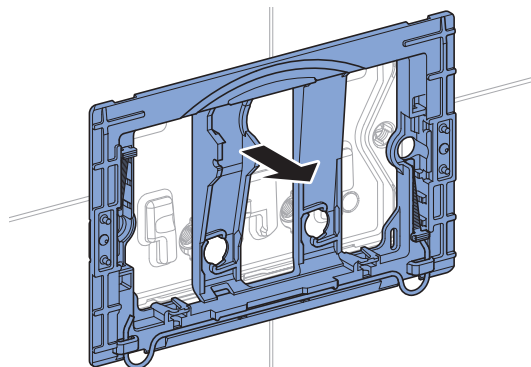

6


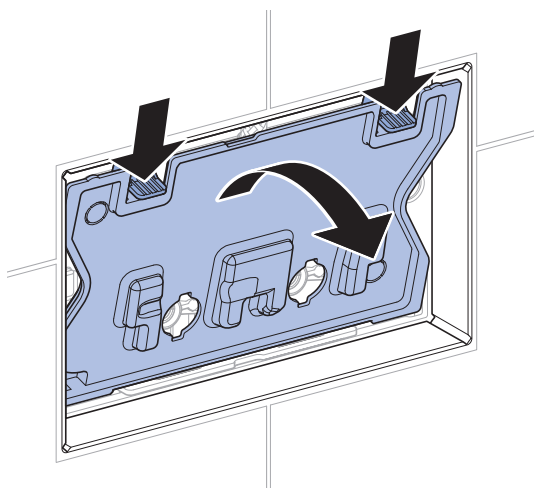


7

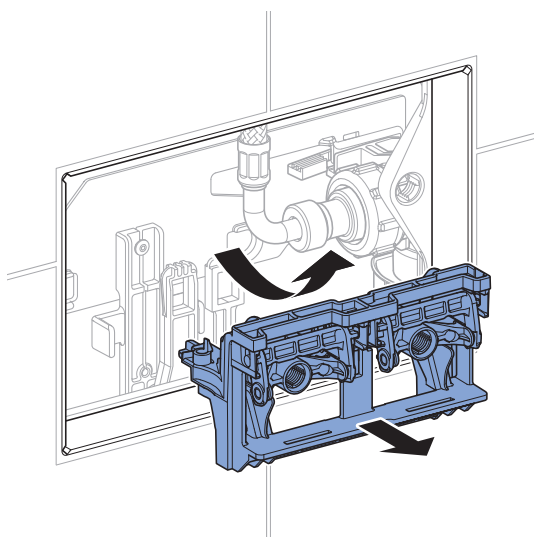


2


1

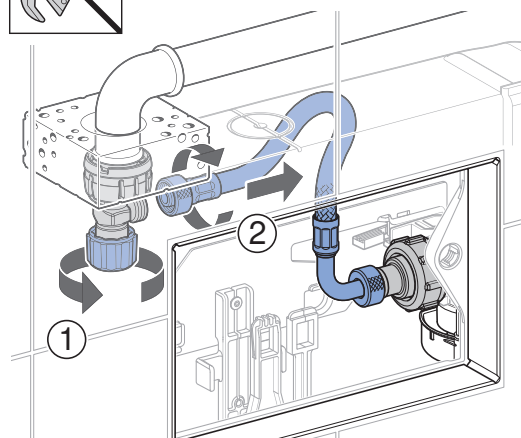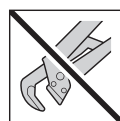


2

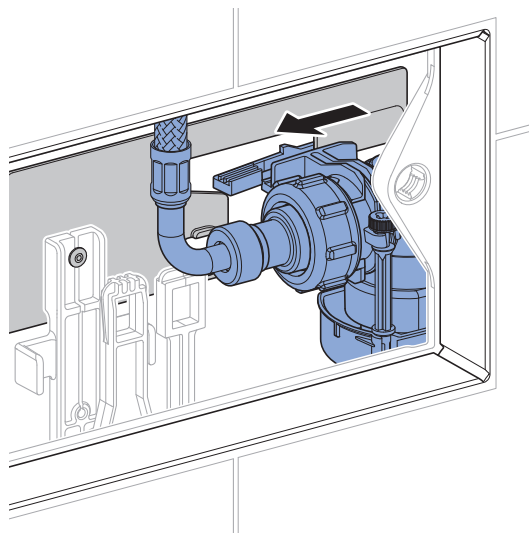


3

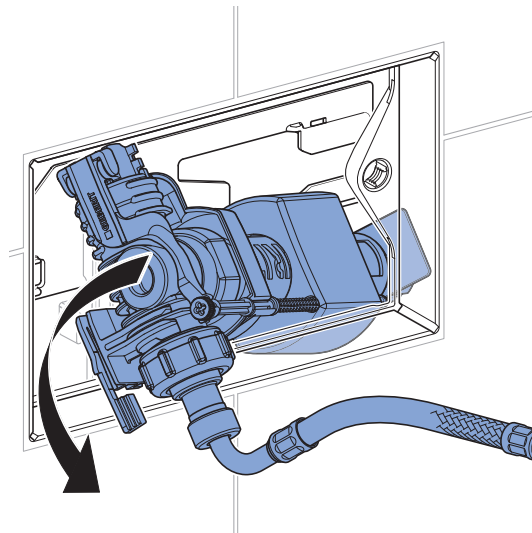


4

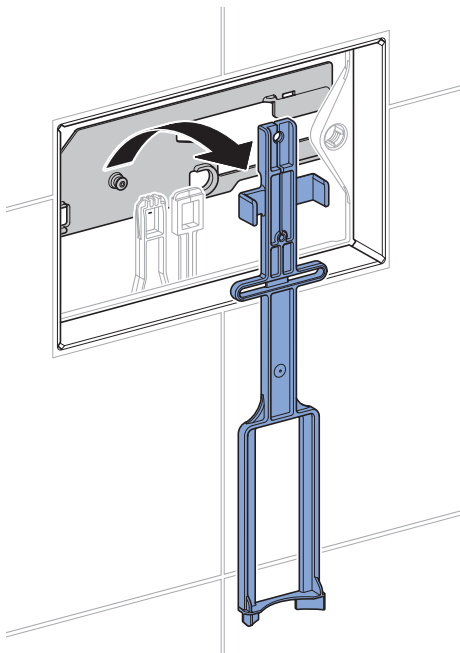



5

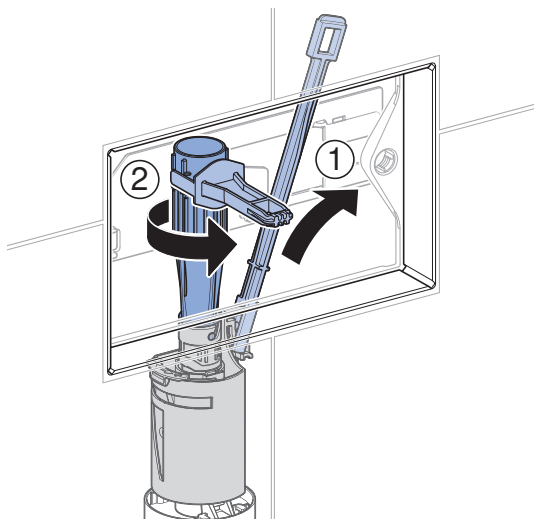


6

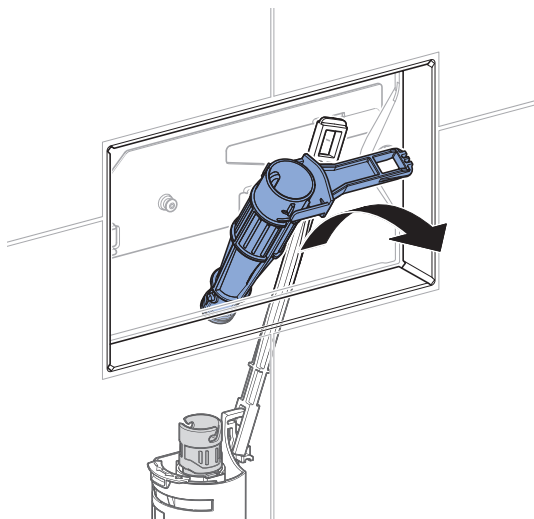


7

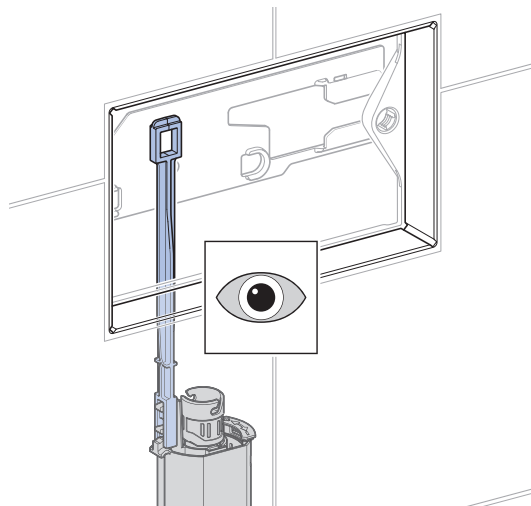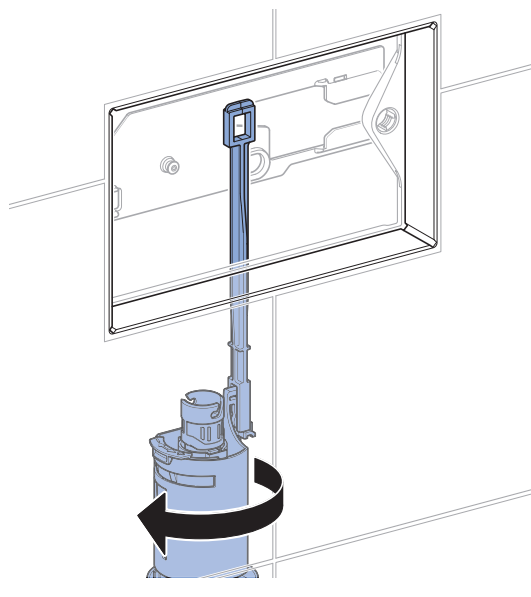


8

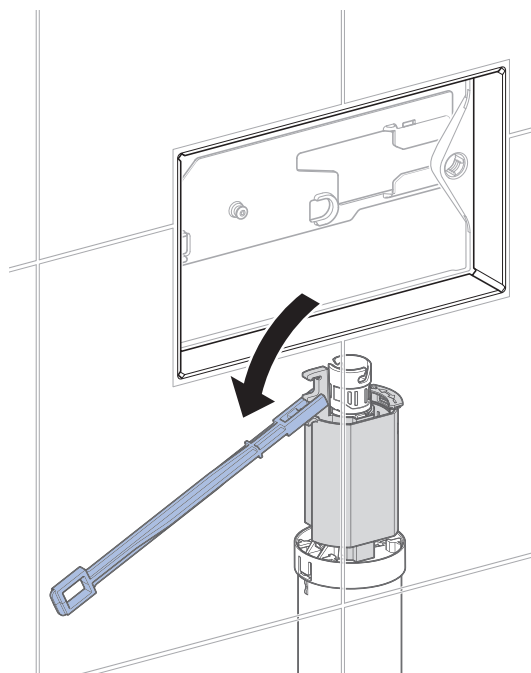


9

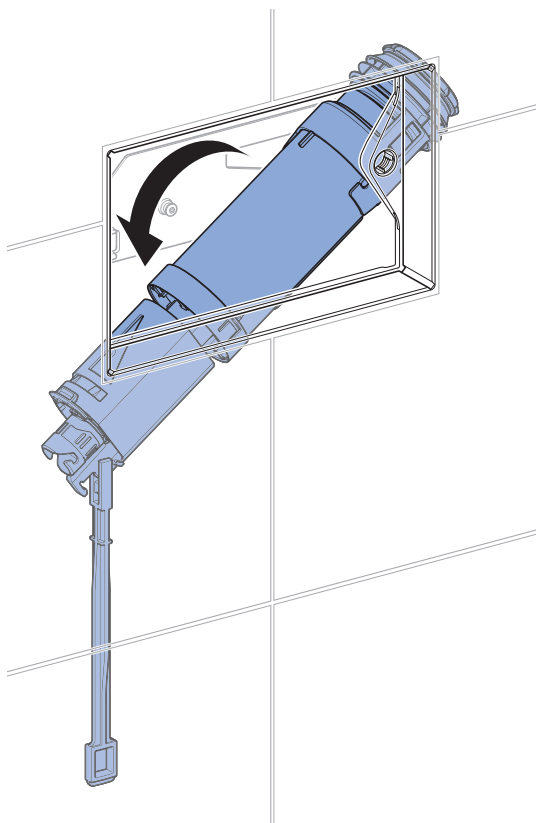

10

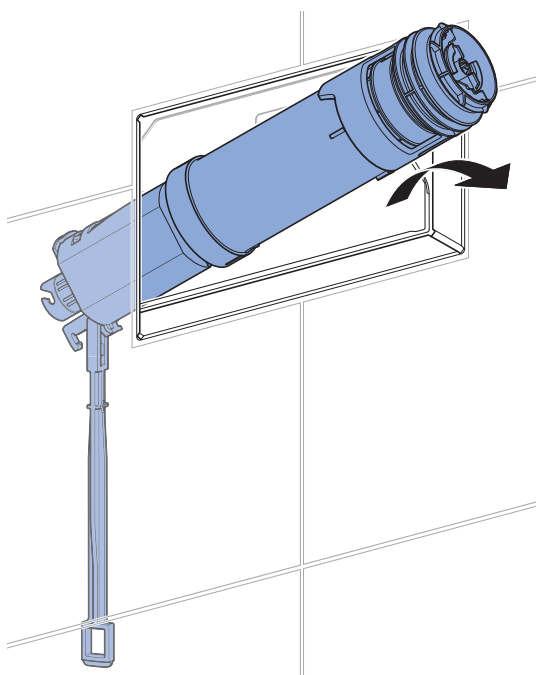


i

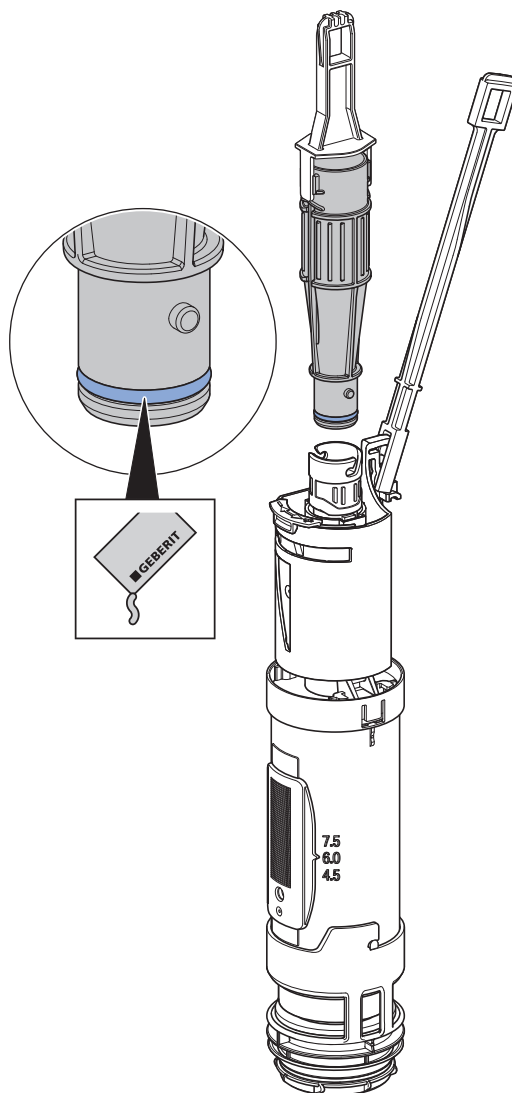








1


 


## Example

4 l

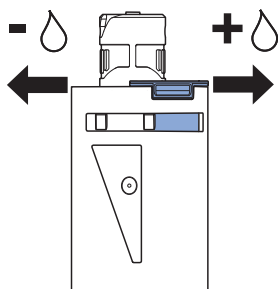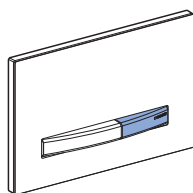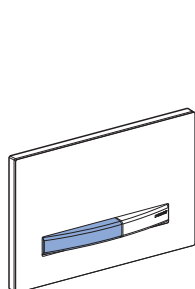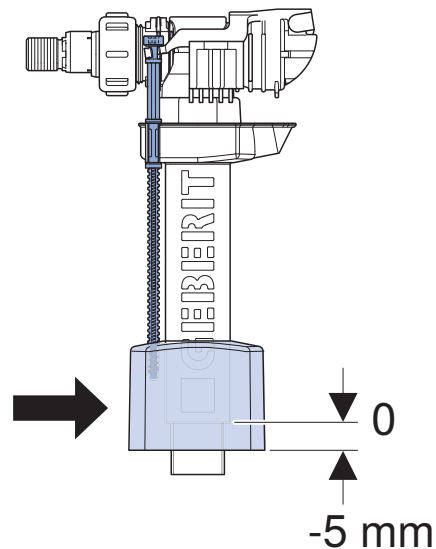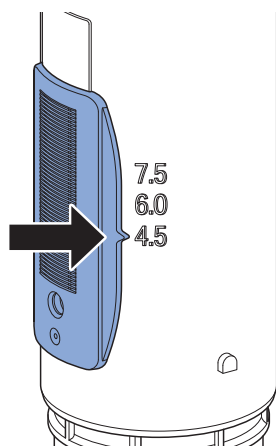


(EN 14055)	X [mm]	
4 l	4.5	-5
5 l	4.5	38
6 l	6	38
7 l	7.5	38

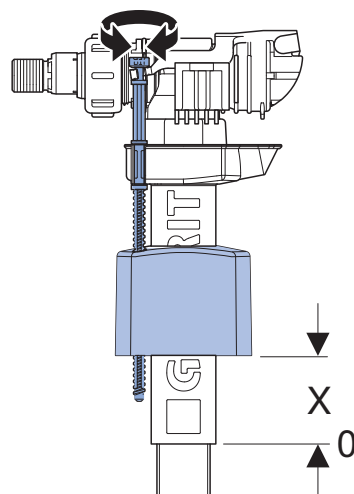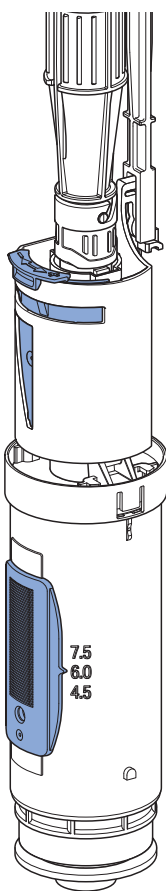

### NOTE:

Not applicable for US installations.

Flush volume modifications shown are a violation of US law. **DO NOT ATTEMPT!**

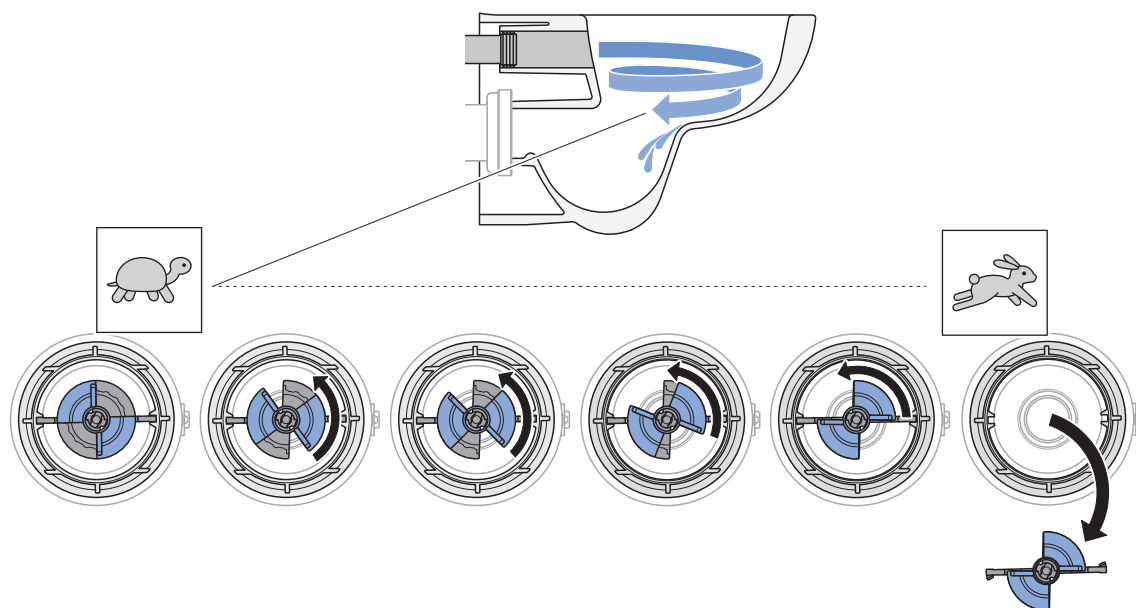



---

Geberit International AG  
Schachenstrasse 77, CH-8645 Jona  
[documentation@geberit.com](mailto:documentation@geberit.com)  
[www.geberit.com](http://www.geberit.com)