

 
NOTES

PARISI

ENVY

VERTICAL HEATED TOWEL RAIL

PARISI



WARRANTY

Thank you for purchasing our product!

Please follow the instructions in this manual carefully.
Please keep the manual properly stored for future reference.
Regarding future product updates, the product is subject to change without prior notice.

Illustrations in this manual serve as visual demonstration.

In order to guarantee that the product will always function optimally, and to ensure your personal safety, please read and follow these installation instructions carefully before starting.

PARISI offer a lengthy and comprehensive warranty against manufacturing defects, which is in addition to that required under Australian Consumer Law.


Please refer to our website for full warranty terms and conditions:
<https://parisi.com.au/pages/warranty-information>

CONDITIONS THAT WILL VOID THE WARRANTY

- Inability to provide a proof of purchase.
- Installation by an unlicensed person.
- Installation not adhering to these written instructions.
- Not following the cleaning and care instructions indicated in this booklet.

Product Registration:

Save yourself time and enjoy peace of mind by registering your new PARISI product directly with PARISI.
Simply scan the QR code below and fill in the online form.

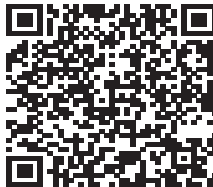


INSTALLATION

Heated towel rails can be fixed to ANY type of wall, timber stud, steel stud or masonry (solid or cavity).

This heated towel rail is rated IP44.

Select a suitable location within zone 2 before commencing with the inwall installation.

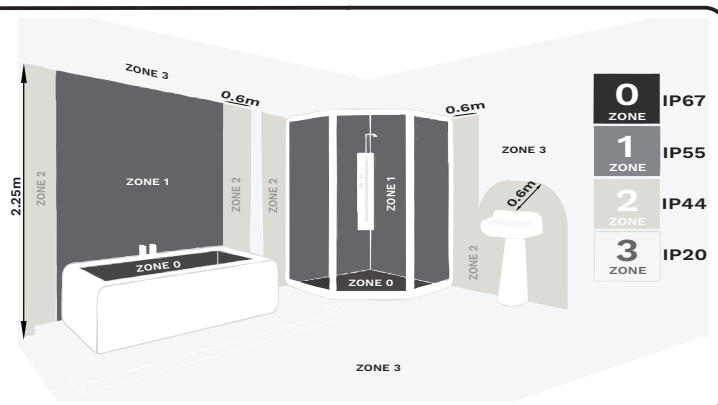

A

WARNING:
To avoid injury to infants, the lowest point should be a minimum 600mm above the finished floor level.



For stud wall installation (timber or steel) place timber noggins at the correct position so that the wall brackets have a support base for the rail. Install wire as per AS/NZS 3000 WIRING RULES

B The rail connection is located in the bottom post. Leave enough free wire so a connection can be made after tiling.

WARNING:
To avoid injury to infants, the lowest point should be a minimum 600mm above the finished floor level.


For masonry wall installation (solid or cavity) channel out a groove in the wall, to imbed the wire. Install wire as per AS/NZS 3000 WIRING RULES

C The rail connection is located in the bottom post. Leave enough free wire so a connection can be made after tiling. Fill the channel before tiling.

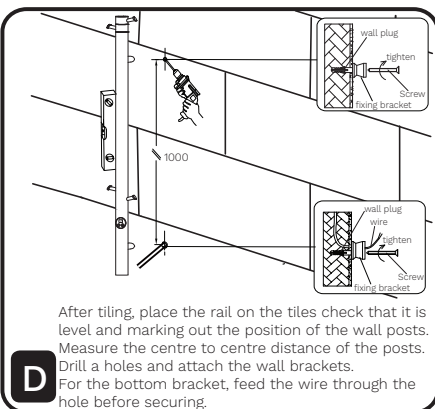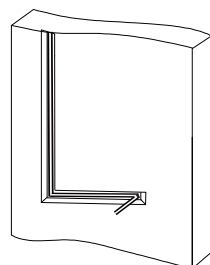

D


After tiling, place the rail on the tiles check that it is level and marking out the position of the wall posts. Measure the centre to centre distance of the posts. Drill a holes and attach the wall brackets. For the bottom bracket, feed the wire through the hole before securing.

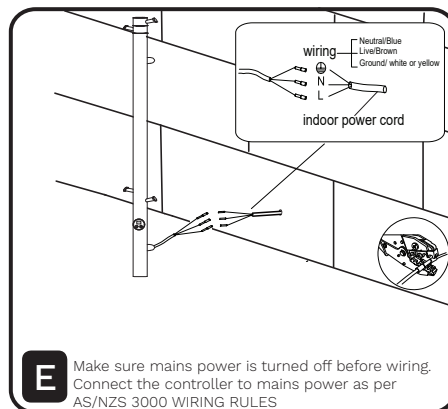

E


Make sure mains power is turned off before wiring. Connect the controller to mains power as per AS/NZS 3000 WIRING RULES

INSTALLATION

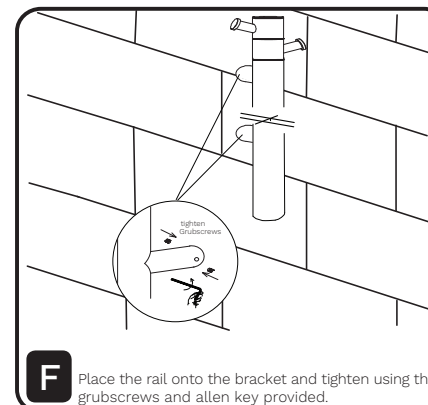

F

Place the rail onto the bracket and tighten using the grubscrews and allen key provided.

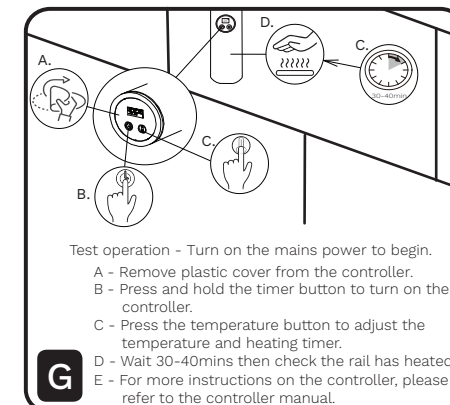


G

Test operation - Turn on the mains power to begin.

- A - Remove plastic cover from the controller.
- B - Press and hold the timer button to turn on the controller.
- C - Press the temperature button to adjust the temperature and heating timer.
- D - Wait 30-40mins then check the rail has heated.
- E - For more instructions on the controller, please refer to the controller manual.

Spare Parts

| NO. | DESCRIPTION | CODE |
|-----|--------------------------------|-----------|
| 1 | ENVY VETICAL HEATED TOWEL RAIL | PV.HTR |
| 2 | WALL BRACKET TOP | SP.HTR013 |
| 3 | WALL BRACKET BOTTOM | SP.HTR014 |
| 4 | GRUBSCREW KIT (4) | SP.HTR015 |
| 5 | WALL FIXING SCREW SET (2) | SP.HTR008 |
| 6 | CONTROLLER | SP.HTR015 |

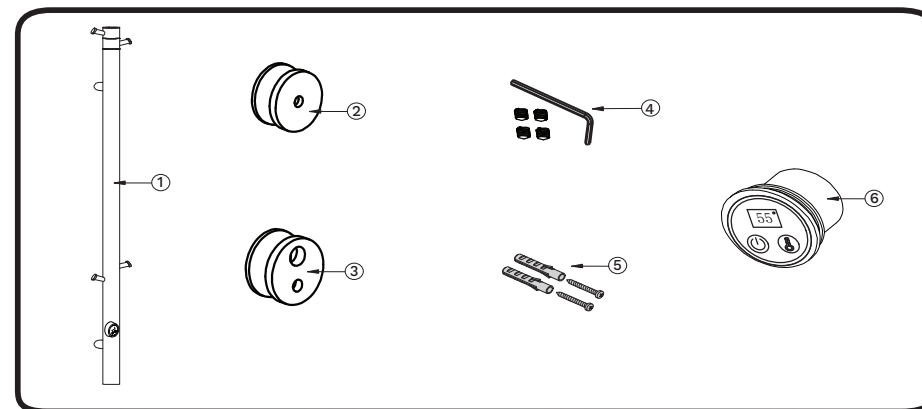

WARNING

Please read this installation guide carefully to avoid personal injury or property damage.

THIS HEATED TOWEL RAIL MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN IN ACCORDANCE WITH AS/NZS 3000 WIRING RULES.

The power voltage is 240V~ 50/60Hz. Use the specified power supply only.

Mains power MUST be turned off before commencing installation, maintenance or repair.

IP RATING 44, Suitable for indoor use ONLY

DO NOT directly spray water on the towel rail.

Children, elderly or those with limited mobility should use this product under supervision
To prevent harm to infants, ensure that the lowest point of installation is at least 600mm from the finished floor level.

FOR SAFETY, PLEASE DO NOT USE THIS TOWEL RAIL FOR ANY OTHER PURPOSE THAN AS A TOWEL RAIL AND A TOWEL DRYER. TO AVOID DAMAGE DO NOT SIT, STAND, LEAN OR HANG ON THIS PRODUCT.

CLEANING

Regular cleaning will maintain towel rail lustre.

- ✓ Only use clean water to rinse and a soft cotton cloth to dry.
Never use abrasive products (such as cleaners, cloths or paper) acidic detergent, harsh cleaners or soap.

✓ = Soft Cotton Cloth

✗ = Acid, Strong Detergent

**OPERATION & MAINTENANCE**

After power-on, the thermostat enters standby mode, the timing button will blink alternately at intervals of 0.5 seconds.

Hold the timing button on the controller to turn it on.

Press and hold the timing button on the controller to turn off the power when the heated towel rail is not in use. Unless the timer has been set.

For more information on using the thermostat, please refer to the thermostat manual.

NOTE: The heating temperature set by the thermostat is tested under laboratory conditions, i.e., at a constant temperature of 24°C and without wind. However, in actual use, the temperature on the towel rail may differ from the thermostat setting by about 5°C due to variations in environmental temperature and air flow on the towel rail's surface.

The Surface Temperature is high when the towel warmer operates. PLEASE BE CAREFUL!

SPECIFICATIONS**TECHNICAL INFORMATION**

| ENVY HEATED TOWEL RAIL | |
|------------------------|---------------|
| MODEL | PV.HTR |
| FREQUENCY | 50 HERTZ |
| POWER RATING | 70 WATTS |
| VOLTAGE | 240 VOLTS |
| HEATING TIME | 15-30 MINUTES |
| HEATING TEMPERATURE | 40-60° C |
| IP RATING | IP44 |
| INSTALLATION METHOD | HARD WIRED |

PRODUCT DIMENSIONS