

## WARRANTY

1. PARISI BATHWARE warrants all tapware for fifteen (15) years from the date of purchase. Proof of Purchase is required when making warranty claims.  
This warranty covers parts and labour for faults related to defects in the material or workmanship. The relevant faulty part(s) will be either repaired or replaced free of charge. Warranty does not extend beyond fifteen (15) years from the date of purchase regardless of any service carried out in the interim.
2. The Ceramic Disk Cartridge carries a fifteen (15) year warranty from the date of purchase regardless of any service carried out in the interim.
3. The surface finish (e.g. chrome plating) carries a fifteen (15) year warranty from the date of purchase.
4. Purchasers of Parisi product may obtain service of all faulty product under warranty by contacting their nearest Parisi distributor. Purchaser must provide Proof of Purchase before any warranty service or replacement of product can be carried out. Product incorrectly identified as Parisi will incur both a call-out and service call charge.  
Parisi distributors are located in all major metropolitan areas, however, when no local distributor is available then service will be at the discretion of Parisi. Unless agreed with Parisi, warranty does not include the cost of freight to and from the Purchaser.
5. For some user-installable products Parisi reserves the right to supply these parts as replacements for the customer to install without voiding the remaining term of the warranty period.  
Parisi also reserves the right to inspect the faulty part before forwarding the free replacement part.
6. Tapware must be installed in accordance with the AS/NZS 3500 series of Standards.


## CONDITIONS THAT WILL VOID THE WARRANTY

- Inability to provide Proof of Purchase.
- Installation by an unlicensed plumber.
- Installation not adhering to these written instructions.
- Water Pressure and Water Temperature not within the stated ranges in this booklet. (Maximum operating pressure not to exceed 500kPa. Maximum hot water temperature not to exceed 90°, 80° is recommended.)
- Isolating taps (mini stop taps) not installed.
- Failure to service aerator.
- Not following the clean and care instructions indicated in this booklet.
- Use of flexible hoses not supplied by PARISI.

## FREESTANDING BASIN/BATH SPOUT

TO.02F EE.02F







TO.03F EE.03F QQ.03F

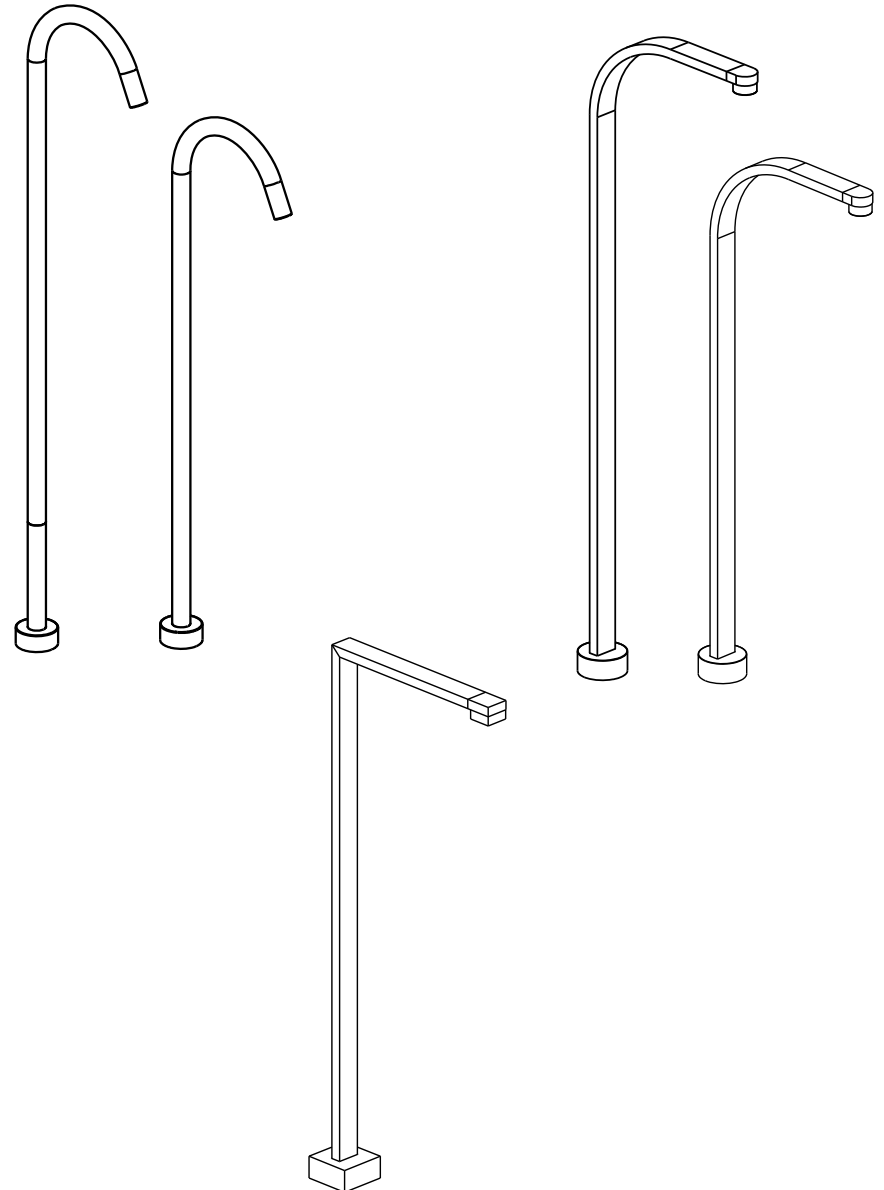

## INSTALLATION INSTRUCTIONS

- 1- Place the Base Fixing Plate (3) in its final position and mark the four holes required.
- 2- Drill the holes and fit the four Plastic Rawl Plugs (1).
- 3- Screw in the Connector Joint (2) through the Base Fixing Plate (3) into position.
- 4- Fix the Base Fixing Plate (3) with the supplied screws (4).
- 5- Push the Spout onto the Base Fixing Plate after raising the Base Cover (7).  
Fix the Spout onto the Base Fixing Plate with the grub screws (5-2).
- 6- Push Base Cover down to cover the Base Fixing Plate.

NO.	DESCRIPTION	Qty	NO.	DESCRIPTION	Qty
1	PLASTIC RAWL PLUGS	4PCS	5-1	SPOUT	1PC
2	CONNECTOR JOINT	1PC	5-2	SCREWS	3PCS
3	BASE FIXING PLATE	1PC	6	ALLEN KEY	1PC
4	SCREWS	4PCS	7	BASE COVER	1PC

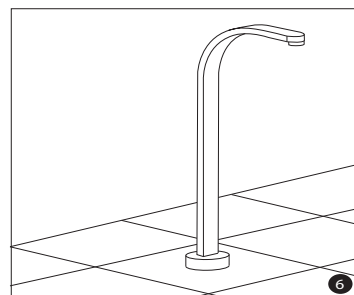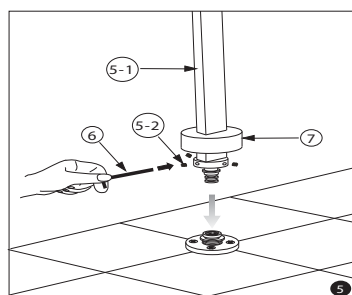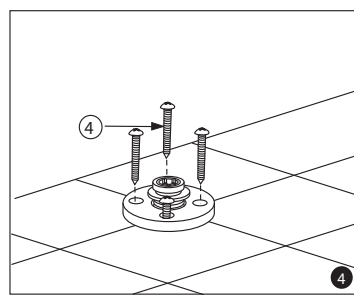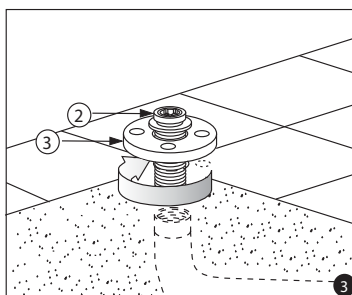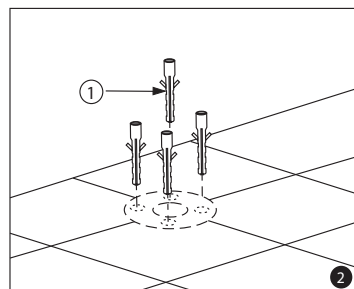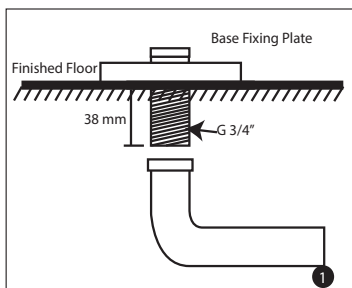

## WARNING



1. Each tapware body assembly is hydraulically pressure tested at the factory. Do not attempt to dismantle the assembly yourself.



2. Before installing the tapware, flush out the water lines to ensure that the pipes are free of any dirt or debris: avoid blockages in the cartridges.



3. After installing the tapware, check all connection points or leakages. Always turn OFF water before removing or disassembling the tapware.



4. Hydraulic pressure for Parisi tapware is 50-500 kPa (including hot and cold hydraulic pressure).



5. Open tapware handle to relieve water pressure and ensure that the water is shut off completely.



6. Do not apply any undue force when using any tools.



7. Do not bend or squeeze the hoses.



8. Working temperature is less than 90° (80° is recommended).

## CLEANING

Constant or regular cleaning will maintain tapware lustre.

- ✓ Only use clear water to rinse and soft cotton cloth to dry.  
Never use abrasive products (such as cleaners, cloths, or paper) acidic detergent, harsh cleaner or soap.

✓ = Soft Cotton Cloth

✗ = Acid, Strong Detergent

In case of thick sediments proceeds as follows:

1. Clean the surface of your tapware with clear water and soft cotton cloth.
2. Use any of the following to remove the dirt:
  - ✓ Mild liquid detergent.
  - ✓ Clear liquid glass cleaner mixed according to the manufacturers directions.
  - ✓ Non-abrasive liquid polish.
3. After cleaning, rinse the tapware thoroughly again with clear water to remove the cleaner and dry it with a soft cotton cloth.

In case the water flow is reduced clean the aerator using instruction above.

