


INSTALLATION

1. Turn off the main switch.(Near water metre)
2. Remove the handles.
3. Remove the flange.
4. Remove the old tap spindle and jumper washer.
5. (Make sure there is no any objective including the temporary tap seat inside of the tap body).
6. Clean the tap body thread and any leftover plumbing tape and fibre washer.
7. Clean the tap body thread and any leftover plumbing tape and fibre washer.
8. It doesn't require to re-seat if Easyseal installed.
9. Screw Easytap Main spindle into tap body firmly.
10. Screw on Easytap spindle locknut.
11. Re-install all tap fittings
12. Turn on the main water supply.

***You must separate the locknut before install Easytap spindle.**

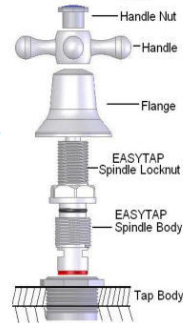

(Installation must comply with Plumbing regulations and by-laws).

WARRANTY

Easytap ceramic disc cartridge with 12 month warranty from purchasing date. This warranty excludes of any labour and transport cost. This warranty is against any of the mechanical damages, such as over forced turning.

Contact: 08 94709666 sales@easytap.com.au