

CARE 600 WALL HUNG BASIN/SHROUD INSTALLATION INSTRUCTIONS

PLEASE READ CAREFULLY BEFORE INSTALLATION

IMPORTANT

Provide suitable reinforcement behind finished wall for the basin D.200 Fixing Kit at the fixing height position.

Note: Suitable for installation to comply to Australian Standard AS 1428.1-2009 Amendment No.1 Design for access and mobility.
See Caroma Care Technical Manual for roughing in and setout details.

Roughing in for D.200 Basin Fixing Kit:

For timber stud walls, noggin and studs must be positioned at a height to allow for the location of fasteners as detailed in **Fig. 1**.

BASIN INSTALLATION WITH D.200 BASIN FIXING KIT

- 1- Mark Fixing Screw hole position on finished wall at the recommended height as detailed in **Fig. 1**.
- 2- Drill two Ø12mm holes in masonry wall for Expansion Fasteners. For timber stud walls drill two Ø8mm holes for Fixing Screws.
- 3- Insert Expansion Fasteners into the drilled holes in masonry wall. The Fixing Screws should be screwed into the wall using the flat section of the Fixing Screw with a spanner as shown in **Fig. 2**. Allow 43 mm of thread to protrude from the finished wall.
- 4- Locate basin onto the Fixing Screws on the wall. Insert Plastic Bushes, Metal Washers and fasten to wall with Fixing Nut to complete assembly as detailed in **Fig. 3**.
- 5- The Plastic Bush allows for leveling adjustment if required by rotating the hexagonal head bush, the basin will be slightly raised or lowered as shown in **Fig. 3**.
- 6- Fit taps and waste assembly to the basin.
- 7- Tighten Fixing Nuts and connect plumbing to complete the installation.

OPTIONAL SHROUD

SHROUD INSTALLATION

- 1- Fix the D.87 Shroud Fixing Bracket (supplied) to the wall, as detailed in **Fig. 4**.
- 2- Ensure basin is secured and plumbing is connected.
- 3- Gently position the shroud into position beneath the basin and locate the Plastic Fixing Sleeves (supplied) into the holes each side of the shroud. Screw the Fixing Studs into the D.87 Shroud Fixing Bracket and tighten with a Allen key (not supplied) to mount the shroud to the wall.

IMPORTANT: DO NOT OVER TIGHTEN, AS THIS MAY CRACK THE SHROUD SIDE.

- 4- Check shroud is level and secured against basin. Snap on Plastic Cap (supplied).

Wall Hung Basin

D.200 Basin Fixing Kit

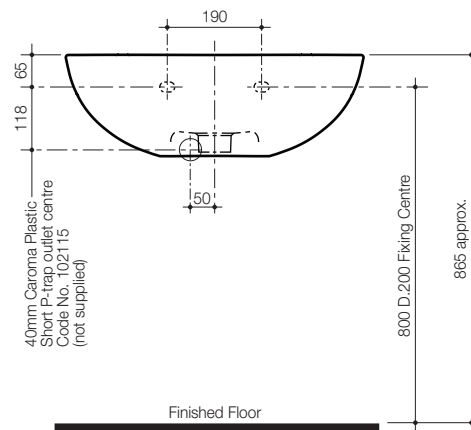


Fig. 1

Note: Suitable for installation to comply to Australian Standard AS 1428.1-2009 Amendment No.1 Design for access and mobility.
See Caroma Care Technical Manual for roughing in and setout details.

D.200 Basin Fixing Kit

Completed Installation

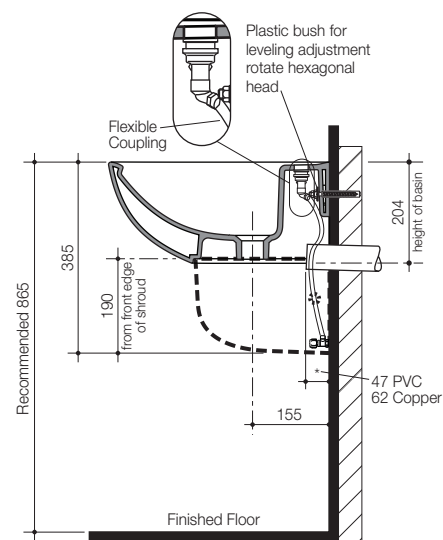



Fig. 3

IMPORTANT:

Fixing Screw

Masonry Walls


Installation

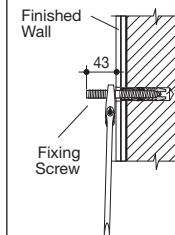

Fixing Screw

Timber Stud Walls

Installation

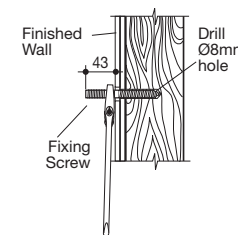

D.200 Basin Fixing Kit

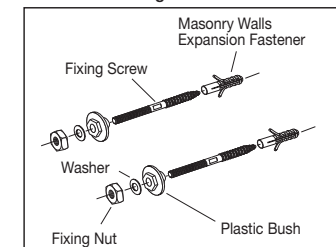


Fig. 2

Shroud Fixing

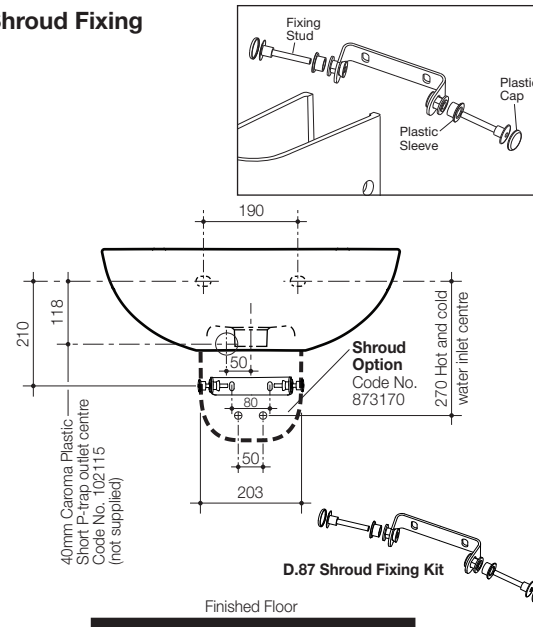


Fig. 4