


PARISI: BOTTLE TRAP

P-TRAP FITTING INSTRUCTIONS

Parts reference.

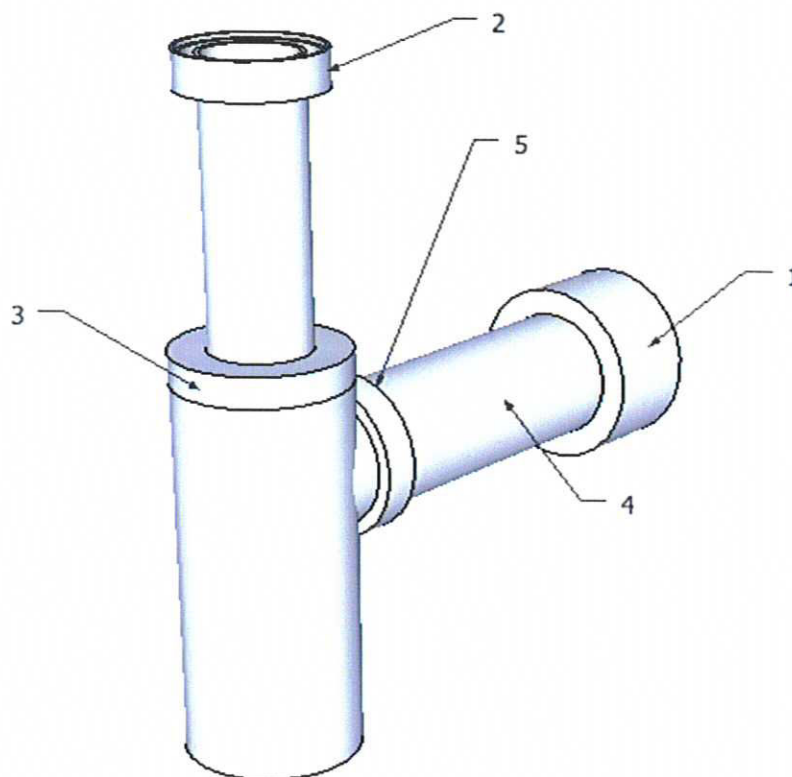

- 1 A Silicone lubricant is to be applied to all the internal O-rings of connector (1).
- 2 Ensure that the already installed PVC pipe (40mm) is cut to the required length: the connector (1) is required to fit flush with the finished wall.
- 3 Slide the connector (1) over the exposed PVC pipe.
- 4 Align the basin connector ring (2) under the basin waste and finger tighten the connector ring onto the waste.
- 5 Gently undo the locking-ring (3) in order to adjust the bottle-trap height and ensure that there is a minimum 5° downward drop in the water-outlet arm (5).
- 6 The chrome pipe (4) can now be cut to the correct size: between position (5)-(1).
- 7 Temporarily remove the trap from basin waste.
- 8 Ensure proper fit of the pipe by twisting and pushing the chrome pipe (4) into the connector (1).
- 9 Loosen and remove the locking-ring (5), then place the O-ring and the locking-ring over the end of the chrome pipe (4).
- 10 Fit the chrome pipe onto the body of the bottle-trap (5), then slide the locking-ring over the O-ring and turn the locking-ring. Do not over-tighten.
- 11 Re-fit the locking-ring (2) to the basin waste and finger-tighten as required.

Please NOTE: do not over-tighten the connectors. All connectors are designed to be finger-tightened and will require no other tools.