










FREESTANDING BATH

PARISI

INSTALLATION

Note: Please check the surface thoroughly before installing. Installation of bath will be taken as acceptance of product.

1. Install waste pipe and trap - taking into consideration the waste position of the bath. Make sure that the surface where the bathtub will be placed is perfectly flat, clean, free of any excess humidity and offers adequate support.
2. The bath should be supported by the legs, not by the rim. Adjust the feet to level and support bath from base.
3. For installation where access is restricted eg slab floor, or second story floor, the use of a Plumbdinger (product code 1409790) waste connector is recommended (for installation refer to Plumbdinger instructions).
4. Fit selected waste to bath and ensure waste is silenced around rim.
5. Inspect thoroughly for leaks.

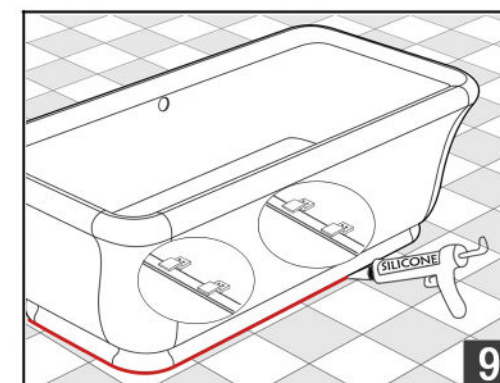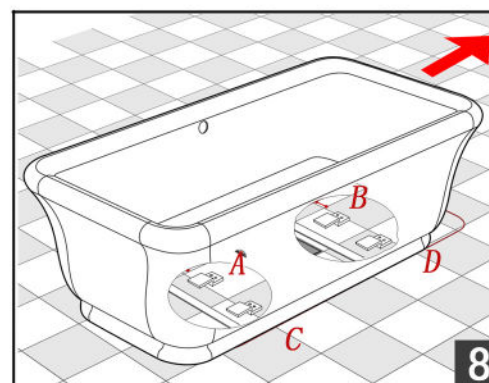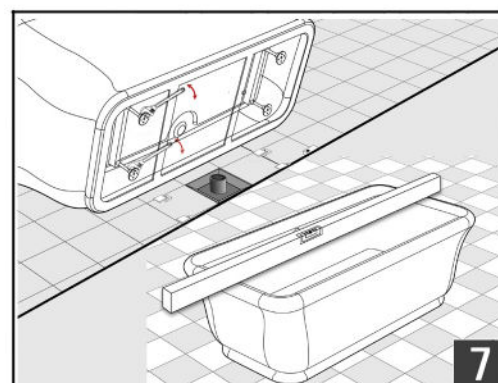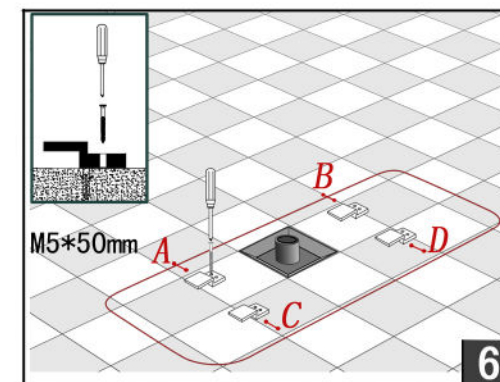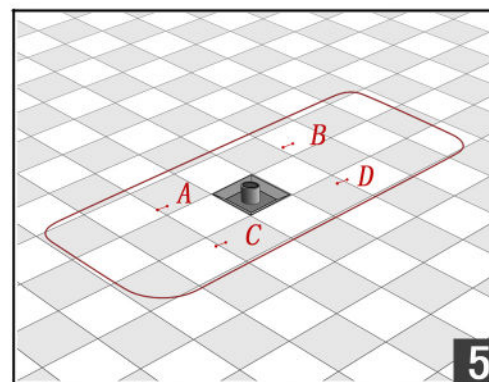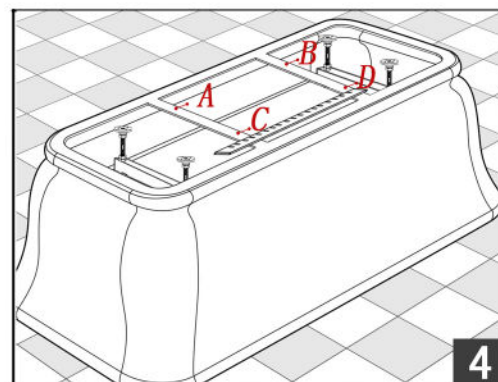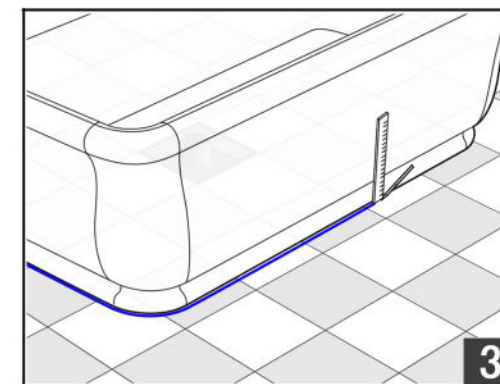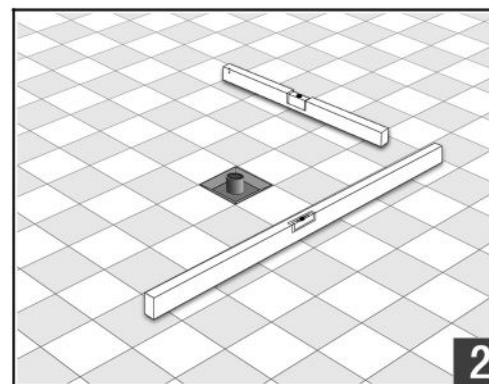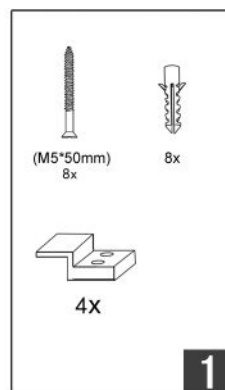

This installation guide does not include details of waste connection; final decision about installation of waste connection should be taken by a suitably qualified person in accordance with the plumbing code AS/NZS 3500.