


Monsoon

Column shower hot/cold

SUSSEX

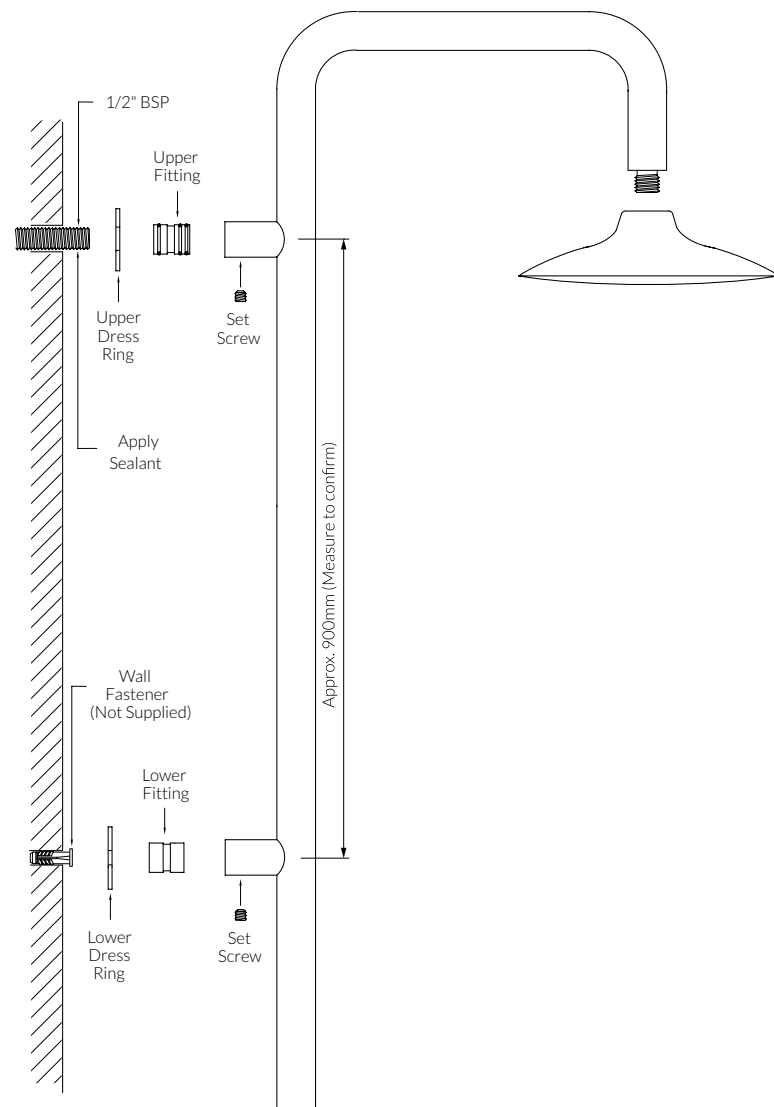

Product code

MSHM500SS Column shower hot/cold

Installation guidelines

- Apply Sealant to 1/2" BSP thread to the lugged elbow.
- Place Upper Dress Ring over thread and fix the Upper Fitting.
- Accurately measure and mark out the position for the Lower Fitting.
- Drill and insert an appropriate Wall Fastener (Not Supplied) into wall surface.
- Position Dress Ring and fix the Lower Fitting.
- Fit the Column Shower and secure by tightening the Set Screws.
- Once secured flush water lines and fit the Shower Head.
- Carry out final water test and check for water leaks around connections.