


MODA FREESTANDING VANITY INSTALLATION INSTRUCTIONS

Illustrations may not reflect every model

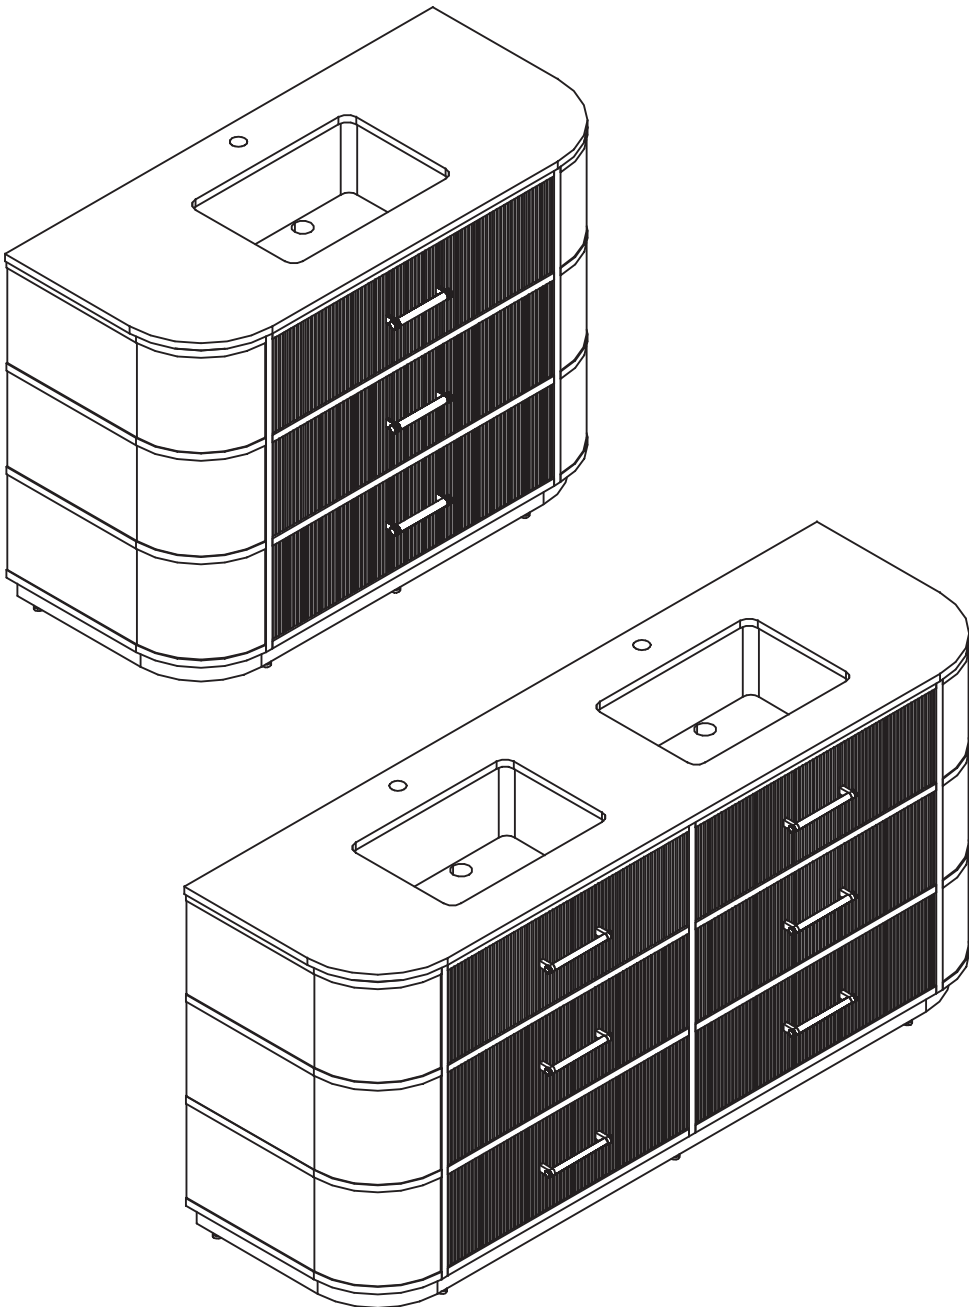

CONGRATULATIONS ON PURCHASING A BEAUTIFUL MODA VANITY
BY PARISI!

INSTALLATION INSTRUCTIONS

Before installing your bathroom products please ensure you read the following instructions.

IMPORTANT

All vanities must be installed by a licensed trades person. Vanities and tops must be installed onto finished surfaces. Plumbing installations according to provisions of AS/NZS 3500.

It is imperative that all bathrooms are constructed to meet the requirements of the Building Code of Australia and any relevant local authority regulations.

FAILURE TO MEET THESE STANDARDS WILL VOID MANUFACTURED WARRANTY.


NOTES FOR INSTALLER

1. Ensure that the finished wall is straight and plumb. It should be free from any twist or bow.
2. When mounting vanity to a timber stud wall make sure there are adequate fixings for fixing the cabinet body at a suitable height. Check thoroughly.
3. Use appropriate fixing points and hardware to mount the cabinet.
4. All cabinets including models with legs must be fixed securely to the finished wall structure.
5. Take care not to damage or remove more than is necessary of the cabinet to provide access for plumbing pipework.
6. After the cabinet is installed on the wall, use the adjusting screws on drawer and door hardware for final alignment.
7. Seal all cabinet and top edges to walls to prevent water penetration.
8. Do not over tighten the basin waste.

PRIOR TO INSTALLATION

It is important that the product is unpacked and inspected for any damage, defects and that the product supplied is correct. If any of the above is apparent, DO NOT PROCEED WITH THIS INSTALLATION AND IMMEDIATELY CONTACT THE STORE OF PURCHASE.

TOOLS REQUIRED FOR INSTALLATION

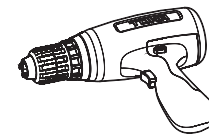


Electric/Battery Drill



Drill Bit



Tape Measure (3m-5m)




Spirit Level



Kitchen & Bathroom
Non-Acidic Silicone



Pencil

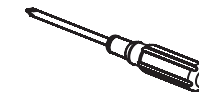

Screw Driver

FIXING COMPONENTS INCLUDED



(A)

Timber Stud
Wall Fixings
70mm Screws/Anchors




(B)

Masonry/Solid
Wall Fixings
90mm Coach Screws,
Washer & Masonry
Anchors



(C)

Adjustable
Chrome Feet

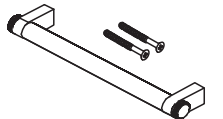



(D)

Drawer
Handles



FREESTANDING VANITY WITH ADJUSTING SCREWS

MODA VANITY SIZE OPTIONS

W 1200 x D 550 x H 848

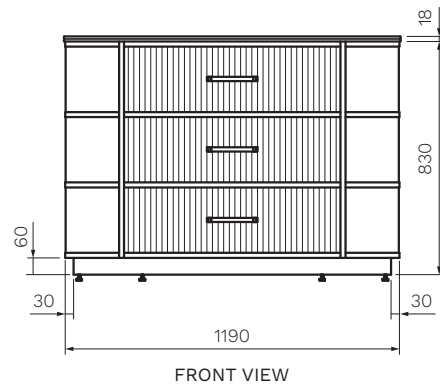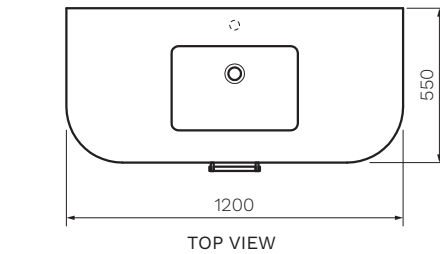


W 1800 x D 550 x H 848

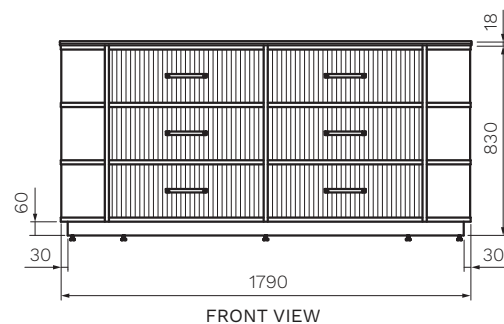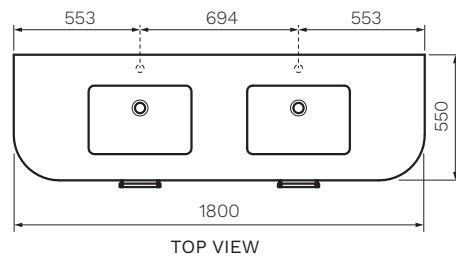

1

Use spirit level, mark & install all brackets level

2

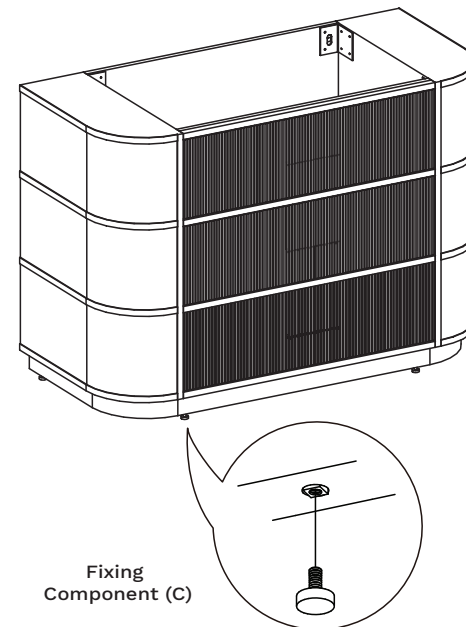

Reverse the carton while unpacking, cabinet legs upward, install the feet. Reverse the cabinet.

Note. The process needs two people to lift to avoid the drawers falling.

3

Place vanity against wall in the desired position.


Check level from side to side and front to back.

Packers may be required to level vanity unit and prevent cabinet from twisting once vanity is level fasten to wall using screws, cap and boss provided.


Installers must check and adjust to avoid mistakes. Adjust leveling feet to suit.

4

1200 Vanity

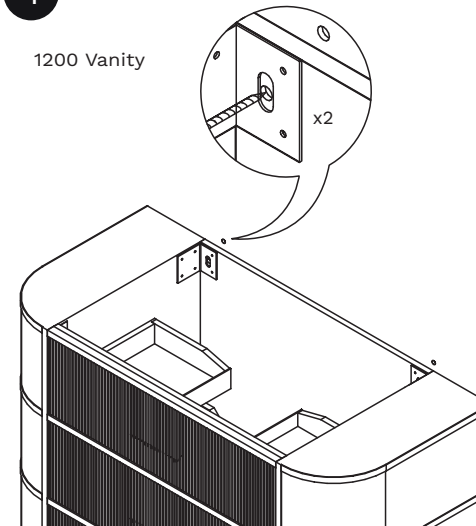

1800 Vanity

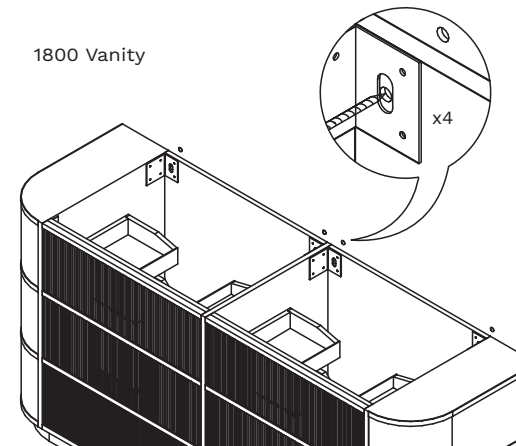

IMPORTANT: All fixing screws that hold the vanity unit onto the wall must fix through wall into horizontal noggin. Failure to do so will result in vanity detaching off the wall.


5

Ensure the vanity is installed level, otherwise, it will affect the use of drawers and cabinet doors on both sides.

Then adjust the drawers as necessary.

6

Using the screws provided, screw into the pre-drilled holes, attach the drawer handles to each drawer. Ensure these are applied securely from inside the drawer panel.

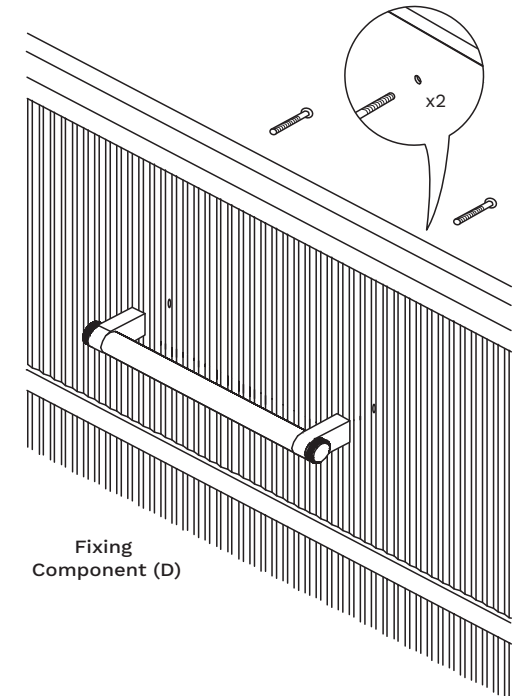


FREESTANDING VANITY WITH ADJUSTING SCREWS

7



CAUTION

LARGE FORMAT PORCELAIN SLAB/MARBLE TOP HANDLING AND PROCESSING

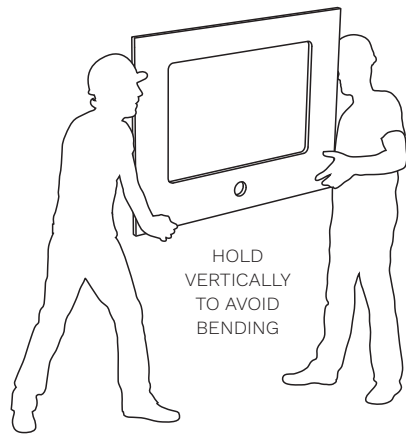

TRANSPORTATION/HANDLING

The bench top must be kept **vertical** when being moved, or lifted ensuring openings or apertures are kept towards the top edge. Pay attention to avoid any bending or twisting.


Large double basin options **must** be supported at the center of the slab to avoid breakage. During transportation do not overlap other objects.

TOP INSTALLATION

The cabinet base must be stable and perfectly flat. Top must be fixed with silicone to the cabinet along the entire perimeter.

All of the upper corners must have a minimum beveling of 2mm, as well as all the edges in the junction of 2 elements (L-shaped top).

Leave a minimum distance from walls of 6mm to be filled with non acidic bathroom & kitchen silicone.

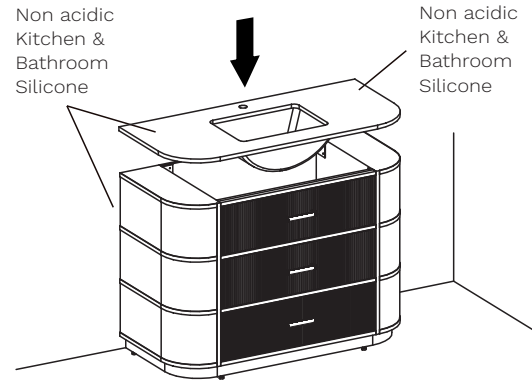

ATTENTION

Bench top is **18mm thick**, when installing vessel basin mixer, make sure you **DO NOT** over tighten causing tension on bench top.

8

Please note when installing counter top basin onto a stone top, they must be siliconed on. When the silicone has dried ensure you caulk around the basin and stone top.

DO NOT USE EPOXY ADHESIVE

9


The vanity is now ready for the tapware and waste installation.

Note:
Waste and tapware installation to be carried out according to AS/NZS 3500


UNIHOOPER DRAWER/HINGE ADJUSTMENT AND REMOVAL

UNIHOOPER GENERAL DRAWER/HINGE ADJUSTMENT AND REMOVAL


Installation

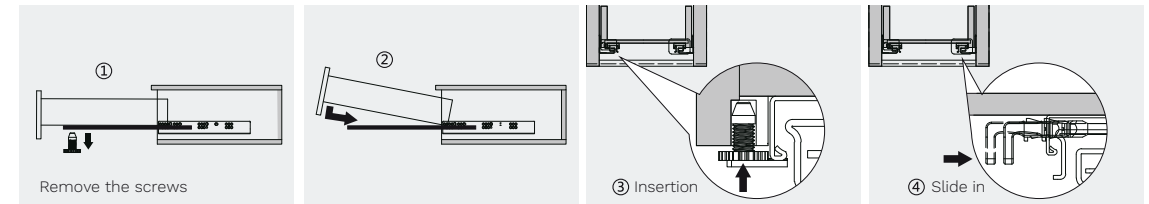

Adjustment

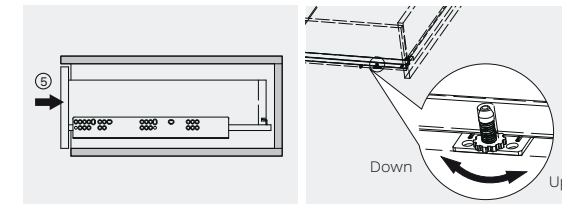


Removal

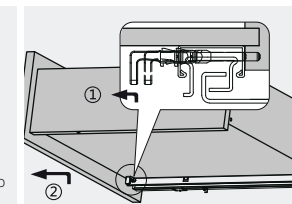


UNIHOOPER QUICK ASSEMBLY DRAWER SLIDE


Installation

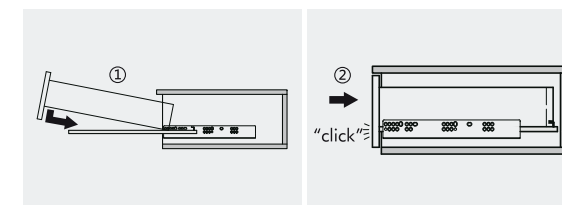

Adjustment

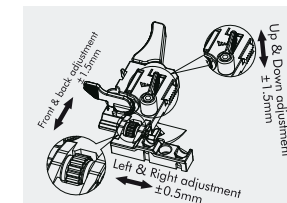

Removal

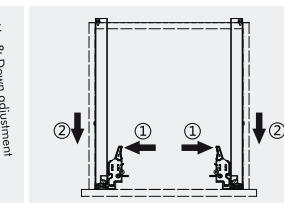

IMPORTANT

1. The drawer slides unsteadily?
To prevent debris from getting into the mechanism while assembling.
2. Cannot work smoothly?
Check if the size of drawer and cabinet meet the requirement; check the drawer is square or diamond; make sure the slide in level.
3. Quick assembly failed?
Correct the front and back assembly position of slide.
4. Drawers cannot fully close?
Correct the front and back assembly position of slide.
5. Fail to remove the drawer?
Turn the quick assembly fittings; take out the lock pin.
6. Rebound distance not enough?
Cabinet must be put in horizontal position to avoid the slide incline backward.
7. Drawer fails to rebound?
If the rebound distance less than 4mm, quick assembly fittings should be adjusted.

Note. Only applies to rebound guide rail

WARRANTY

PARISI has confidence in their products' quality and function and offer lengthy and comprehensive warranties against manufacturing defects, which are in addition to that required under Australian Consumer Law.

Refer to our website for full warranty terms and conditions:

www.parisi.com.au/pages/warranty-information

CARE INSTRUCTIONS

Please refer to PARISI Bathroom Furniture Warranty and Care for details.

NOTES

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

PARISI