




REMOVE EXCESS SEALANT

Excess sealant must be removed promptly with a suitable clean-up solvent recommended for use on both the counter/benchtop and stainless steel to ensure damage does not occur.



PLUMBING & TAPWARE

IMPORTANT - Connections to plumbing should always be done by a licensed plumber. Fit supplied basket wastes to sink bowls. Install tapware according to manufacturers instructions.

If 2 or more individual basins/bowls are under-mounted, a minimum distance of 3 ½" (90mm) is required between the basins/bowls. The counter/benchtop supplier is to determine the support method required.



It is essential that the installation is waterproof and carried out in accordance with these instructions. Oliveri Solutions will not be held responsible for any damage caused by leakage or faulty installation.

CARE INSTRUCTIONS FOR YOUR OLIVERI STAINLESS STEEL SINK

AVOID CONTACT WITH ROUGH OR DIRTY SURFACES.

Polished stainless steel will show scratches!

Manufactured from genuine 18/10, 304-grade stainless steel, Oliveri stainless steel sinks offer optimum hygiene and durability. Your sink will continue to shine for many years with regular care.

- Clean daily with soap and water and then towel dry
- Always clean in the direction of the grain of the Stainless Steel surface
- Use a soft brush or sponge (old tooth brush)
- Wipe over with a glass cleaner (Windex is very good)
- Polish with a metal polish paste (Autosol / Brasso)
- Use a Liquid cleaner (Bon-Ami or Jiff)

IT IS IMPORTANT TO NOTE THE FOLLOWING:

- NEVER use steel wool
- Beware of harsh liquid cleaners
- Beware of grit within cloths and mineral deposits within water
- Avoid prolonged exposure to acids from fruit, fruit juices, salts, spirits, bleach, tea-bags
- Avoid prolonged contact with ordinary steel such as tin cans or steel wool (rust stains may result)
- Do not keep harsh (acids or chlorine) chemicals under the sink / laundry tub
- Do not leave chlorine/chloride chemicals on the stainless steel surface
- Do not leave liquid soaps & cleaners to dry on stainless steel
- Do not use bleaches

Oliveri Solutions Pty Ltd

51 Naweena Rd, Regency Park SA 5010 Phone: +61 8 8348 6444 Email: sales@oliveri.com.au

oliveri.com.au

INSTALLER - PLEASE READ & FOLLOW THESE INSTALLATION INSTRUCTIONS

FOR UNDERMOUNT SINKS

Please retain for owner as care instructions are included.



CHECK MODEL

The model number on the sink packaging must match the model of sink the customer ordered. Do not install if incorrect.



CHECK CONDITION OF THE SINK

Inspect the sink for any visible defects. **Do not install the sink if defects are found.** Contact your sink retailer/point of purchase.



AVOID CUTS

The perimeter and punch-outs on the sink may contain sharp edges. Handle the sink carefully to avoid personal injury.



AVOID SCRATCHES

Stainless steel can be scratched if proper care is not taken during installation.



CLAIMS FOR DAMAGE WILL NOT BE ACCEPTED AFTER INSTALLATION.

IT IS HIGHLY RECOMMENDED THE ACTUAL SINK BE PRESENT WHEN THE COUNTER/BENCHTOP IS CUT OUT AS A REFERENCE FOR ACCURACY

Downloadable cut-out template files and/or cut-out dimensions are available from our website.


MATERIALS FOR FITTING THE UNDERMOUNT SINK:

- **Oliveri sink** including mounting clips, basket waste(s) and accessories (depending on model).
- **These installation instructions**
- **Cut-out template and/or dimensions** (refer website)
- **Level** to check counter/benchtop and sink is installed level
- **Flat head screwdriver** (large - to tighten basket wastes)
- **Suitable sealant & fastening materials** (neutral-cure silicone sealant and structural hardware)
- **Clamping mechanism** (such as threaded rod and timber bearers)
- **Additional mounting hardware** if fitting into thinner material. The instructions for bolting the sink require a minimum counter/benchtop thickness of 25mm (1").

Any advice, recommendation, information, assistance or service provided by Oliveri Solutions in relation to goods manufactured by it or their use and installation, is given in good faith and is believed by Oliveri Solutions to be appropriate and reliable. However, any advice, recommendation, information, assistance or service is provided by Oliveri Solutions without responsibility or liability.

FOLLOW THESE STEPS TO INSTALL AN OLIVERI UNDERMOUNT SINK

IF COUNTER / BENCHTOP IS SUPPLIED WITH CUT-OUT, SKIP STEPS MARKED WITH*



CHECK SPACE

Ensure there is adequate space for tapware (including a splashback if specified). Check space for installation (underneath) and operation (above). Particular care must be taken when a thick splash back is used (it may interfere with tapware location and operation). Ensure the cabinet will not foul the sink mounting flange or basins.



TEMPLATE *

Cut-out templates for your Oliveri sink are available online at oliveri.com.au Use the product model number to find the template. Some sink templates apply to both left-hand and right-hand models. Ensure template is the correct way around for your model.




MARK CUT OUT *

Carefully mark out the template (or follow drawing instructions) making allowance for any additional polishing back that is required after cutting. **NOTE: The template is the exact finished cut-out size required.**




CUT & FINISH HOLE *

Drill pilot holes to accept an appropriate cutting tool for the counter/benchtop material (wear suitable personal protection equipment). Cut inside the mark, allowing sufficient material for any sanding and polishing back if required. **NOTE: Accuracy of the cutout shape is essential to ensure visual alignment with the bowl / basin perimeter and so any accessories fit correctly.**



TRIAL FIT THE SINK

Carefully position the sink against counter/benchtop to make sure it fits the cut-out correctly. If the fit is not correct, remove the sink and proceed with remedial work. Perform another trial fit after corrections have been made.

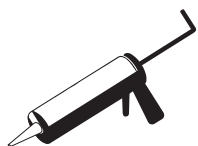

APPLY SEALANT



Apply suitable sealant recommended for both the counter/benchtop material being used and for stainless steel. Neutral-cure sealant will not damage stainless steel. It may be easier to apply sealant after preparing your clamping equipment. Do not allow the sealant to dry before the sink is clamped to the counter/benchtop.

DO NOT INSTALL USING EPOXY ADHESIVES


Should a genuine warranty claim arise for a sink installed using this method, Oliveri will cover the replacement cost of the sink only and not the cost of sink removal or reinstallation. **If you have any doubts, confirm the correct mounting method for your material by consulting the counter/benchtop supplier.**

ADDITIONAL FASTENING

The sealant alone may appear to bond the sink to the counter/ benchtop. However, when installing your Oliveri undermount sink, it is important to always use methods A or B (below) to locate the sink securely in the counter/bench top in conjunction with the sealant manufacturer's instructions.

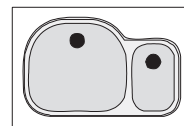

Above shows sandwich method where sink is clamped between a lower support board (with routed edge) and the upper counter/benchtop using method A.

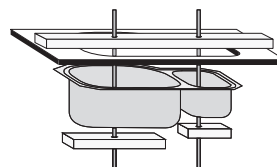


Above shows how threaded rod and timber bearers may be used to clamp the sink in place while fastening to the counter/benchtop using method B.

Do not overtighten as this may damage the sink.


FITTING THE SINK

Position and align the sink correctly in the cutout (some threaded rod and timber bearers will help to clamp the sink in place) and either:

'A' Sandwich Method: RECOMMENDED FOR BOTH THIN AND THICK COUNTER/BENCHTOP. Firmly fix a support board into / over the cabinet and cut the sink hole so that the sink flange will sit above the edge of the board. Slightly rout the edge so that the sink flange will sit flush with the top surface. Test for fit. Install sink and seal between flange and support board. Apply sealant to the underside edge of the cutout on counter/benchtop material and position it over the support board to sandwich the sink in place. Fasten the counter/ benchtop securely.

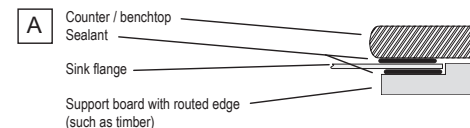

'B' Bolt: For minimum 25mm (1") thick material. Bolt it to the counter /benchtop using "molly" assemblies. Care must be taken during drilling and tightening to avoid cracking. NOT RECOMMENDED TO BE USED WHEN FITTING SINK TO THINNER COUNTER/BENCHTOPS.

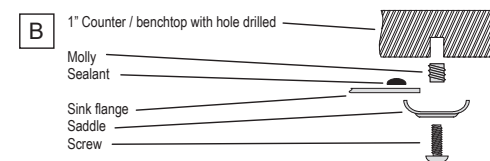

Oliveri